


ASSEMBLY

1. Cut Lifting Pistons & Reservoirs (A.) from chassis bottom and trim the "spurs" (#1).
Wait until final positioning of all components before gluing.
2. Press-fit Reservoir steps into Chassis seats (#2).
Wait until final positioning of all components before gluing.
3. Press fit Boom Rotator Pins ("B") into Boom Tower Step (#3).
Boom's vertical position may be adjusted up and down.
Wait until final positioning of all components before gluing..
4. Press fit Gripper Swivel (C.) into Boom Hook and rotate down (#4).
5. Attach Gripper to the top of a container (its "bow" will allow prototypical clearance).
Rotate the Gripper Spreader to the desired angle.(#5)
6. Cut Lifting Pistons to desired length and glue to seats in the bottom of the lifting plate (#6.)

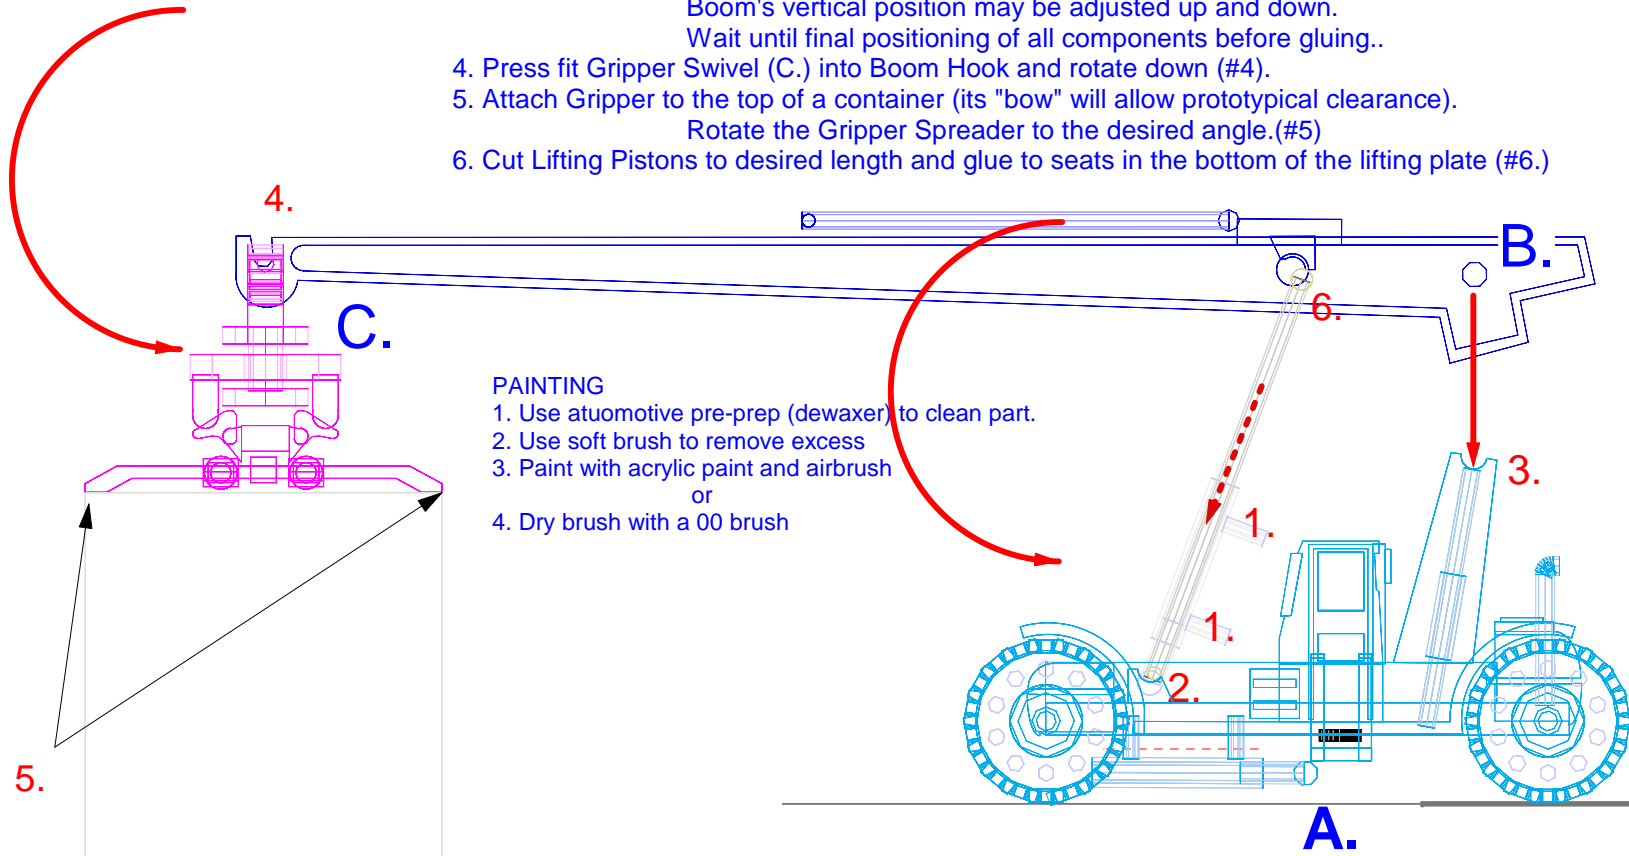

PAINTING

1. Use automotive pre-prep (dewaxer) to clean part.
2. Use soft brush to remove excess
3. Paint with acrylic paint and airbrush
or
4. Dry brush with a 00 brush